



Wi-Fi Broadcast & Security Setup

Your Indoor Wi-Fi Access Point is setup with factory default settings that match the outdoor Wi-Fi broadcast settings of the Freedom Connect dome, located on the roof of your coach. Below is the procedure to access and change the Wi-Fi broadcast name of the indoor access point.




Please note this will only change the access point settings for the INDOOR Access Point! In order to change the Wi-Fi Broadcast name of the OUTDOOR Wi-Fi, you must use the Freedom Connect App. Please refer to our quick start guide for more information.

01

Step 1: Select & Connect



In the Wi-Fi settings of your smart device, select the Freedom Connect Wi-Fi broadcast using the credentials provided on your Quick Start Guide to connect to the Access Point.

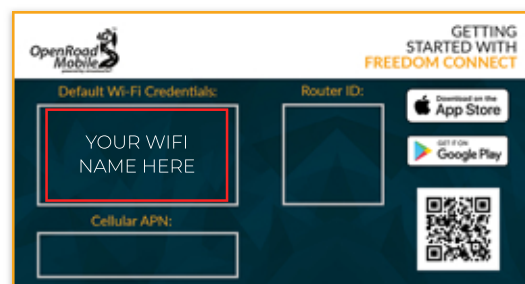

02

Step 2: Access Control Panel & Login



Using your browser, navigate to **http://192.168.81.2** to access the Indoor Access Point. Login using **admin** as both the **username & password**.



03

Step 3: Control Panel Wireless Settings



In the left side menu, **select "Wireless"** to access the wireless settings. In the right side pane, locate **"Wireless Network Name"** and replace with your desired name. *Leave all other settings as already set & press save.*




Please Note: At this point the wireless access point will change the name of SSID and your smart device will be booted off.



04 Step 4: Connect to NEW Broadcast Name



Navigate to the Wi-Fi settings on your smart device and locate the NEW Wi-Fi Broadcast Name you just entered from Step 3. Connect to this Broadcast Name to reconnect to the Wi-Fi network.

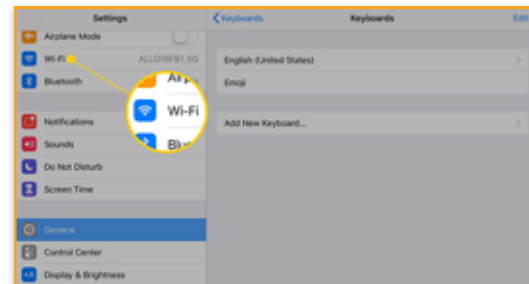

05 Step 5: Setup Wireless Security



Navigate to “Wireless Security” in the left pane of the access point control panel.

- 1.) On the right side pane, select the radial button for “WPA/WPA2 - Personal(recommended)”.
- 2.) Leave the default settings of **WPA2-PSK for Version** and **AES as Encryption** along with **Group Key Update Period as 0**.
- 3.) Input in your desired password into the “Wireless Password” box. Then scroll to the bottom of the page and press “Save”.



Please Note: At this point the wireless access point will add Wi-Fi security to your Wi-Fi broadcast and your smart device will be booted off.

06 Step 6: Reconnect Using Your New Credentials



Navigate to the Wi-Fi settings on your smart device and locate the Wi-Fi Broadcast Name you just used from Step 3. Connect to this Broadcast Name to reconnect with the Wi-Fi network and input in the new Wireless password from Step 5.

You may document your new Wi-Fi credentials here for safe keeping:

WiFi Broadcast (SSID):

WiFi Password:



OFFICE LINE: 321.710.7853
TOLL FREE: 888.960.4513



support@openroadmobile.com
openroadmobile.com/getting-started
openroadmobile.com/knowledge-base/