



## Wi-Fi Broadcast & Security Setup

Your Indoor Wi-Fi Access Point is setup with factory default settings that match the outdoor Wi-Fi broadcast settings of the Freedom Connect dome, located on the roof of your coach. Below is the procedure to access and change the Wi-Fi broadcast name of the indoor access point.




Please note this will only change the access point settings for the INDOOR Access Point! In order to change the Wi-Fi Broadcast name of the OUTDOOR Wi-Fi, you must use the Freedom Connect App. Please refer to our quick start guide for more information.

### 01

#### Step 1: Select & Connect



In the Wi-Fi settings of your smart device, select the Freedom Connect Wi-Fi broadcast using the credentials provided on your Quick Start Guide to connect to the Access Point.

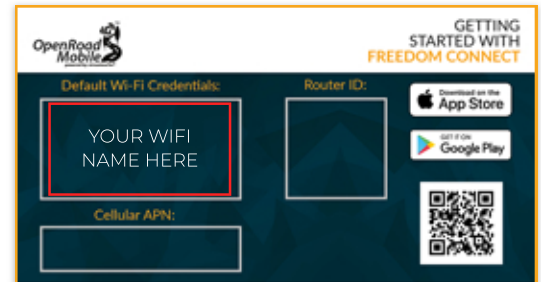

### 02

#### Step 2: Access Control Panel & Login



Using your browser, navigate to <http://192.168.81.2> to access the Indoor Access Point. Login using **admin** as both the **username & password**.



### 03

#### Step 3: Control Panel Wireless Settings



In the left side menu, **select "Wireless"** to access the wireless settings. In the right side pane, locate **"Wireless Network Name"** and replace with your desired name. *Leave all other settings as already set & press save.*



**Please Note: At this point the wireless access point will change the name of SSID and your smart device will be booted off.**